



2-Flipper Circuit Wiring Diagram

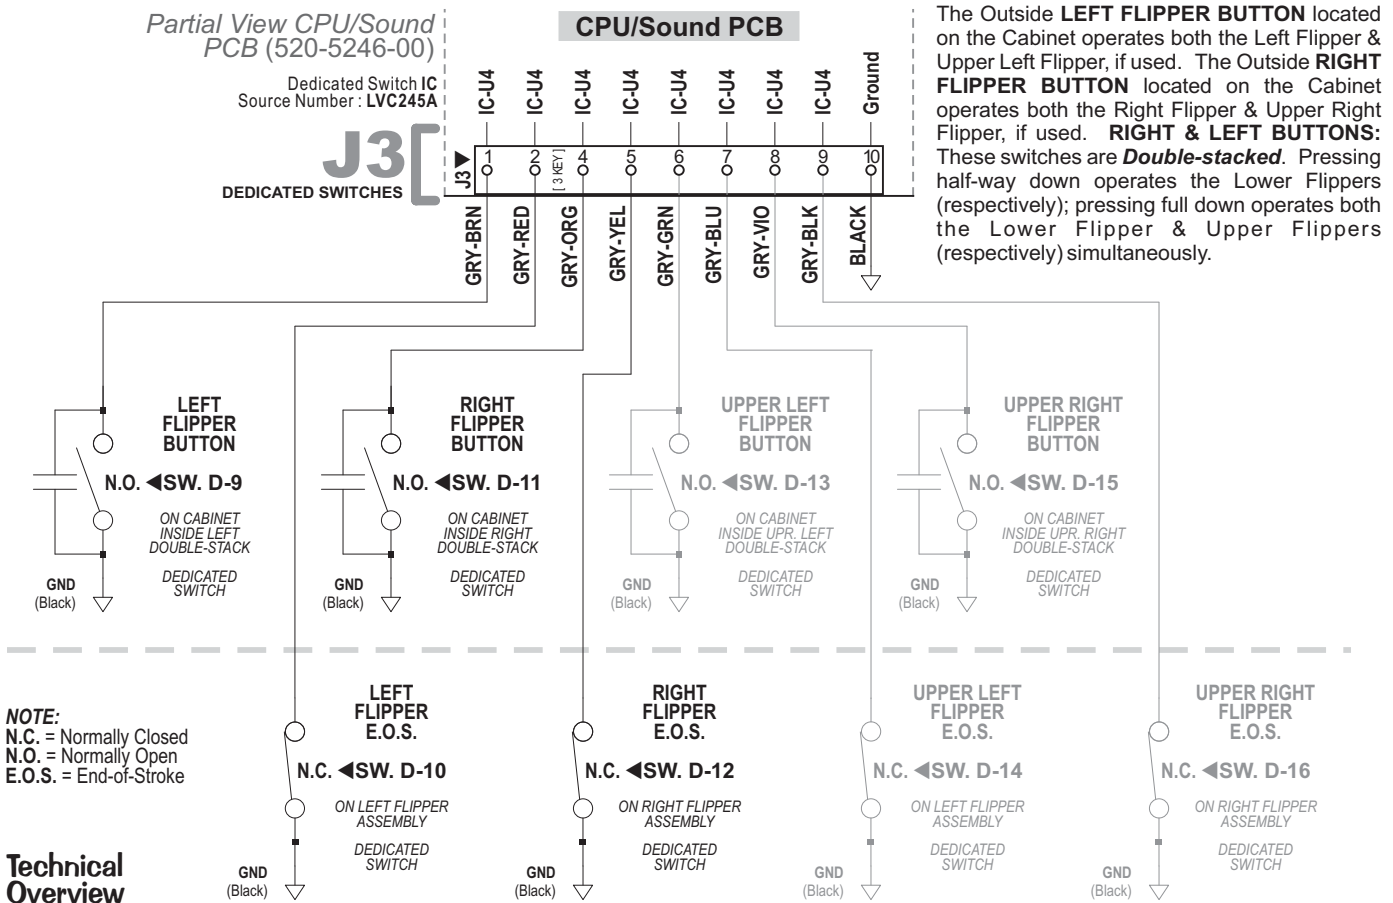



Our **Flipper System** uses one supply voltage (+50VDC) for both **kick & hold**. Once the **Game CPU** detects a Flipper Cabinet Switch closure (*during game play*) it applies a 40msec pulse to the gate of the Flipper Drive Transistor (STP22NE10L). If it continues to detect a Flipper Cabinet Switch closure (*the player holding the button in*) it will continue to pulse the flipper drive transistor 1msec every 12msecs for the duration of the hold cycle.

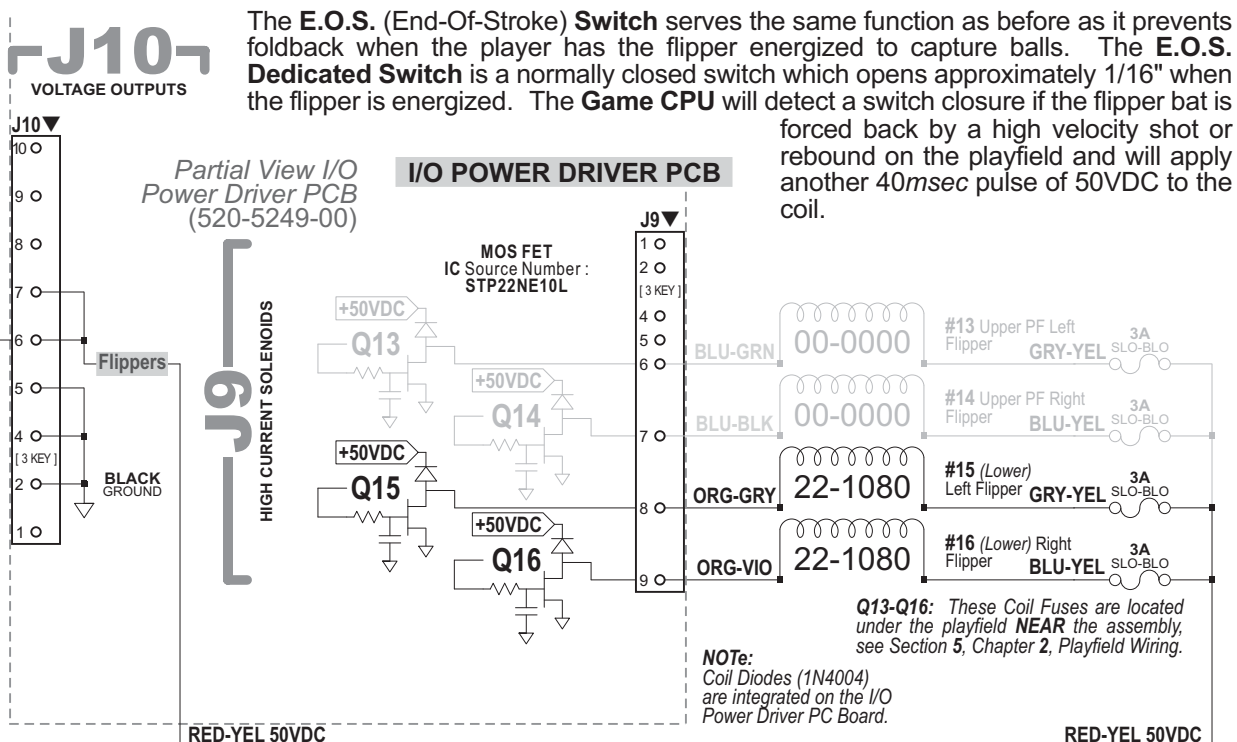

Sec. 5: Playfield ...




Cabinet and Coin Door Wiring

Transformer Power Wiring Diagram

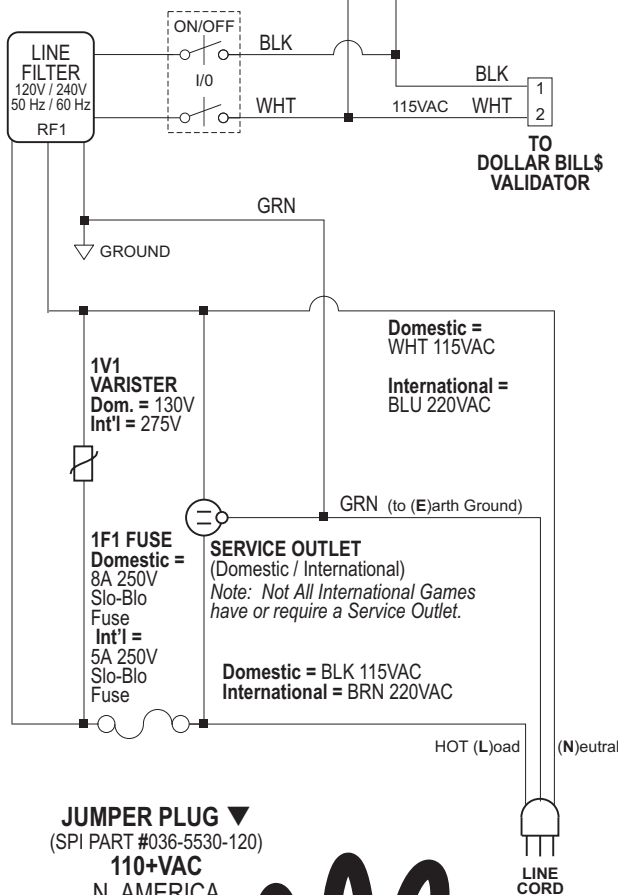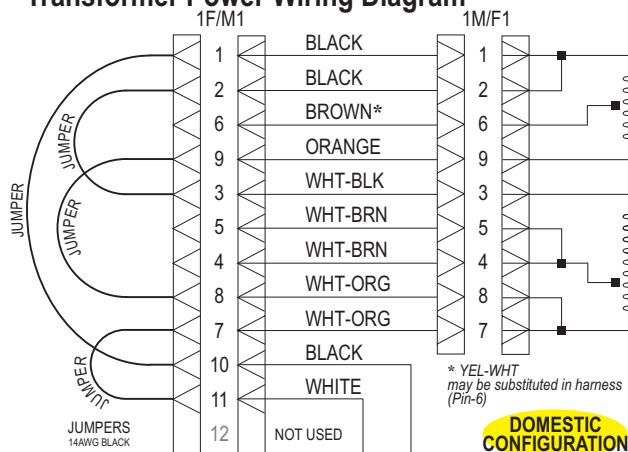


JUMPER PLUG ▼
(SPI PART #036-5530-120)
110+VAC
N. AMERICA
LINE VOLTAGE

For all the Cabinet
Universal Voltage
Jumper Plug
Configurations for
voltage variations,
see the end of this
Chapter, Page 102.

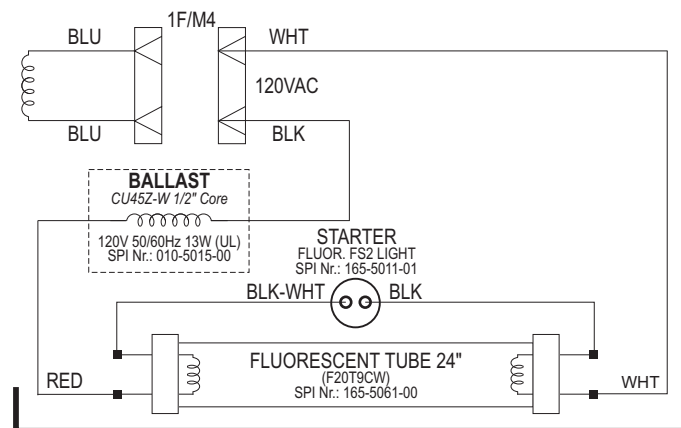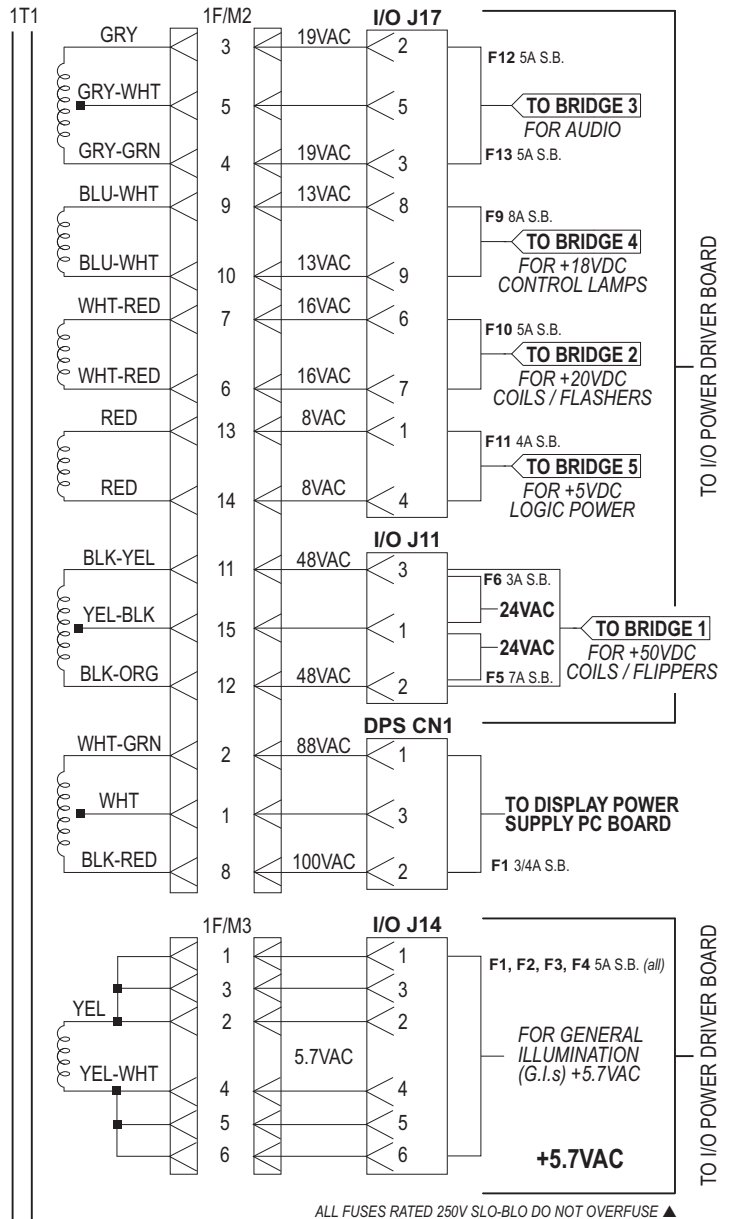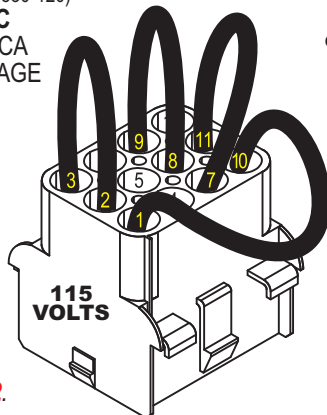


FLUORESCENT TUBE, STARTER & BALLAST
LOCATED IN THE BACKBOX

Cabinet Wiring Diagram

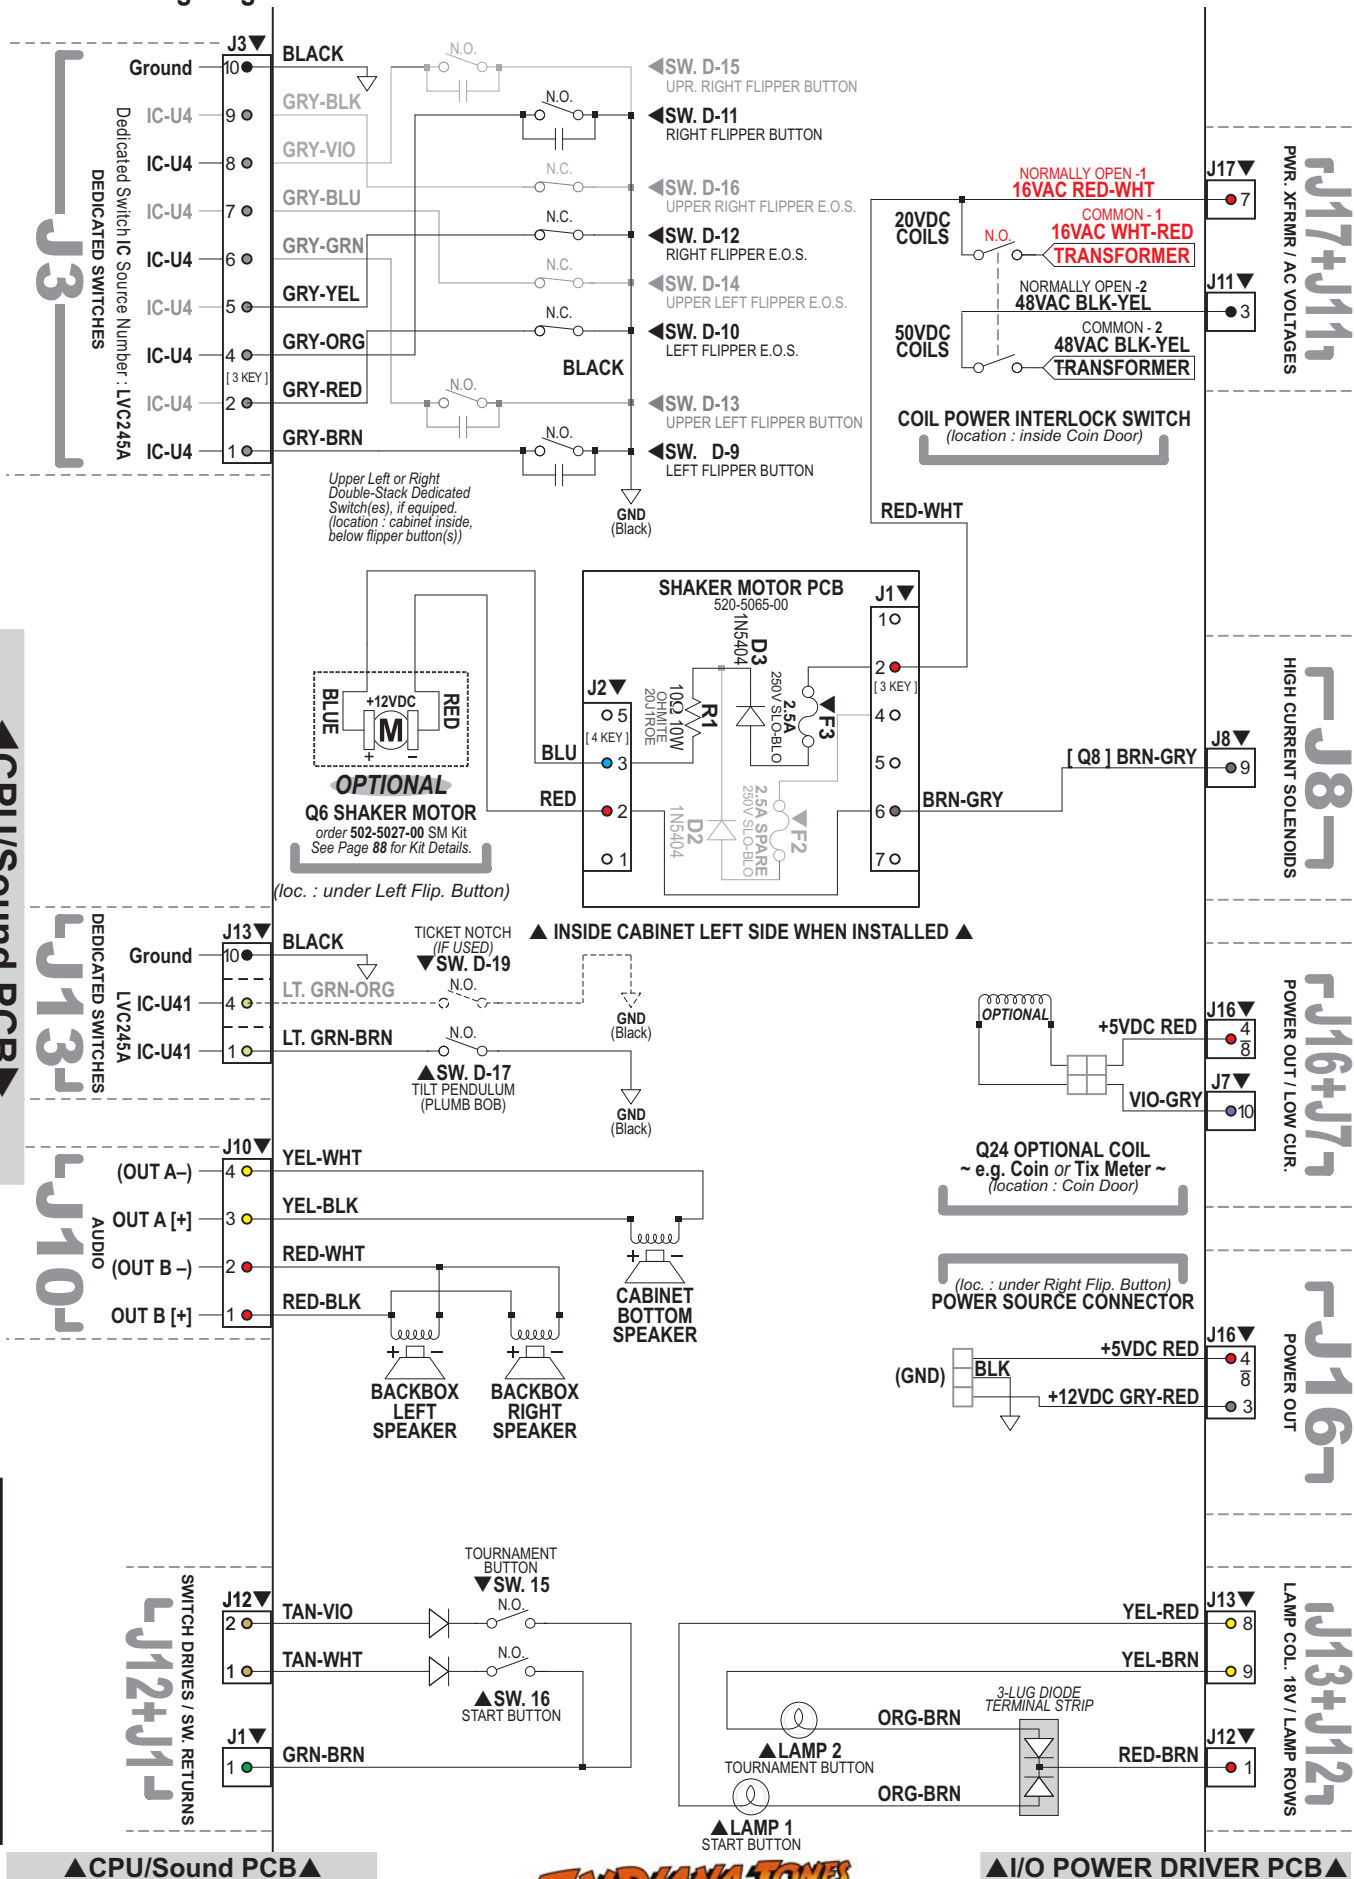

Coin Door Wiring Diagram


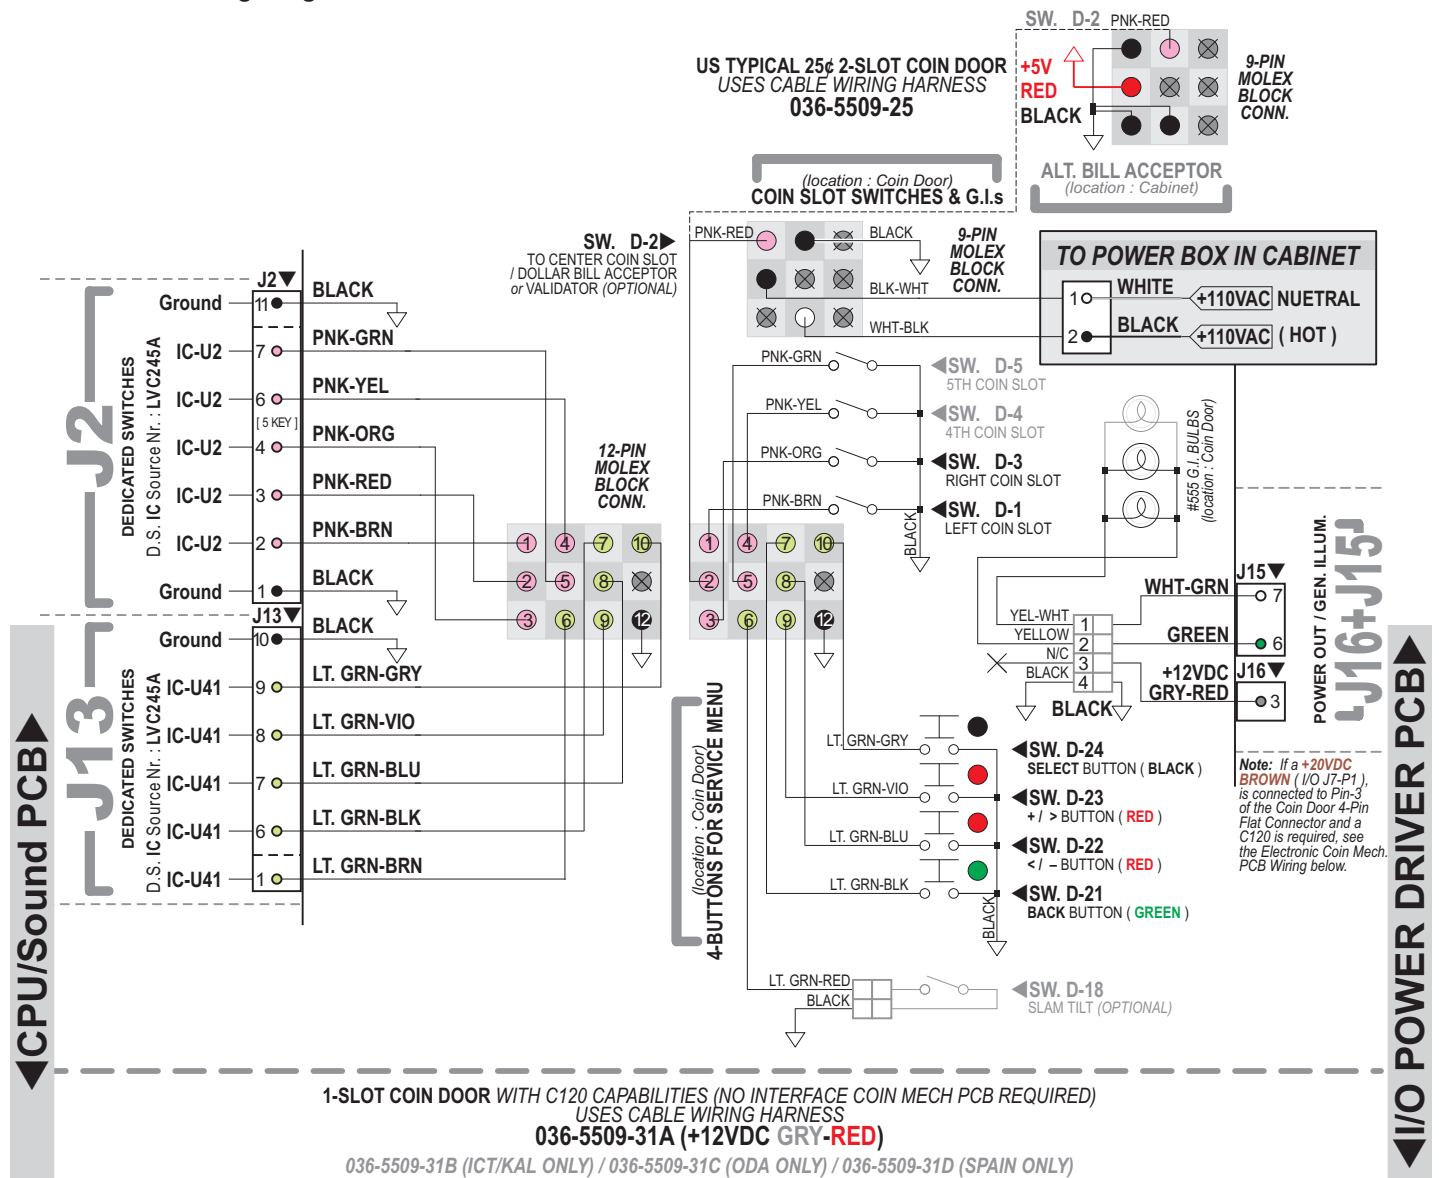


IF YOUR GAME HAS AN ELECTRONIC COIN MECH. INTERFACE PC BOARD (520-5193-00):

1-SLOT COIN DOOR USE WITH C120 CAPABILITIES REQUIRING PCB 520-5193-00

USES CABLE WIRING HARNESS

036-5509-31 (S.A.M. SYSTEM)

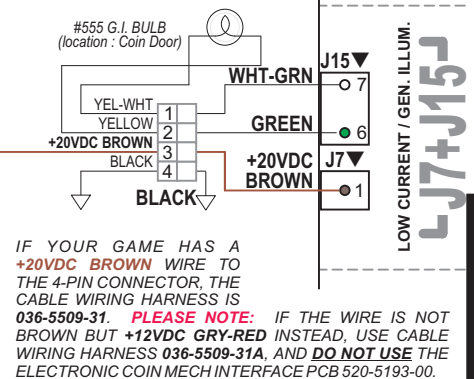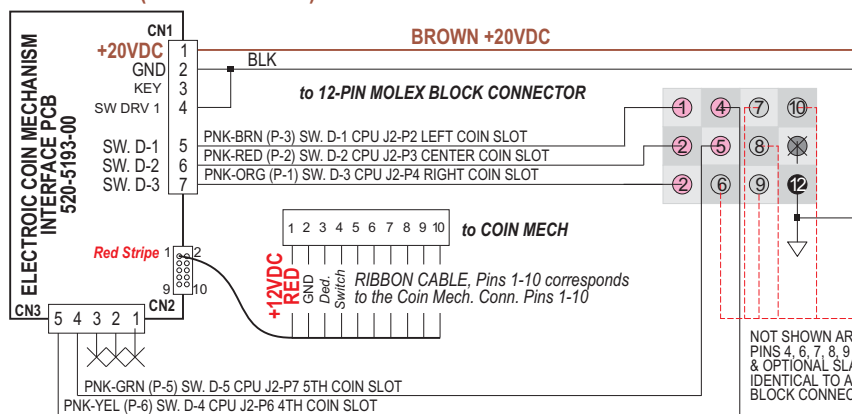

NOT SHOWN ARE THE WIRES FOR PINS 4, 6, 7, 8, 9 & 10 (SERVICE BUTTONS & OPTIONAL SLAM TILT); THEY ARE IDENTICAL TO ABOVE 12-PIN MOLEX BLOCK CONNECTOR

~ WIRING CONFIGURATION WILL VARY ACCORDING TO COUNTRY ~